

Changing Time Nortel Modular ICS and Compact ICS

To Change Time:

1. Press * * T I M E which is same as
 * * 8 4 6 3
2. Enter Password which is A D M I N or 2 3 6 4 6
3. Follow Prompts
4. Press Release Button when finished
5. Time will populate for entire system